

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (772)734-952-31

<https://superq.nt-rt.ru/> || squ@nt-rt.ru

Flow Readout Box



Flow Readout Boxes provide operating power supply, operating control, flow setting and flow digital display for the mass flow controller (MFC) and the mass flow meter (MFM). It can be connected with our MFC and MFM directly. And, it can also be used for other models of MFC or MFM.

The **SQD-1A** series Flow Readout Boxes adopt the small plastic casing, it is compact and easy to install. For the flow input and output signal, except for the standard 0-5V signal, also has the current signal 4~20mA or 0~10mA.

1A type flow readout box has the flow setting and valve control function, which can be used with mass flow controller and mass flow meter.

1AM type flow readout box has no flow setting and valve control function, which is specially designed for the mass flow meter.

Model	SQD-1A/1AM
Nominal Output	+15V±5%, 400mA ; -15V±5%, 400mA
Normal Power Supply	+5V±0.1%, 5mA
Power Supply	165~265VAC (or 85~265VAC) , 50Hz
Max. Consumption	10W
Output & Input Signal	0~5V or 4~20mA (or 0~10mA)
Dimensions	96×96×148mm

SQD-1B series flow integrator used for the control and display of MFC/MFM, and can be providing flow upper & lower limit alarm function. It has RS485 digital communication and the communication protocol is compatible with MODBUS-RTU standard, can be connected with PLC and configuration software, to achieve wireless control.

Model	SQD-1B	SQD-1BP
Nominal Output	+15V±5%, 400mA ; -15V±5%, 400mA	
Power Supply	220VAC/24VDC (Incompatibilities, should be specified when order)	
Max. Consumption	10W	
Output & Input Signal	0~5V, RS485	
Dimensions	96×96×108mm	
Cumulative Flow Display	Yes	Yes
Cumulative Flow Alarm	No	Yes
Timer alarm	No	Yes
Upper & Lower Limit Alarm	No	Yes
Wireless Control	Optional parts	Optional parts

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (772)734-952-31

<https://superq.nt-rt.ru/> || squ@nt-rt.ru